



Basic Setup

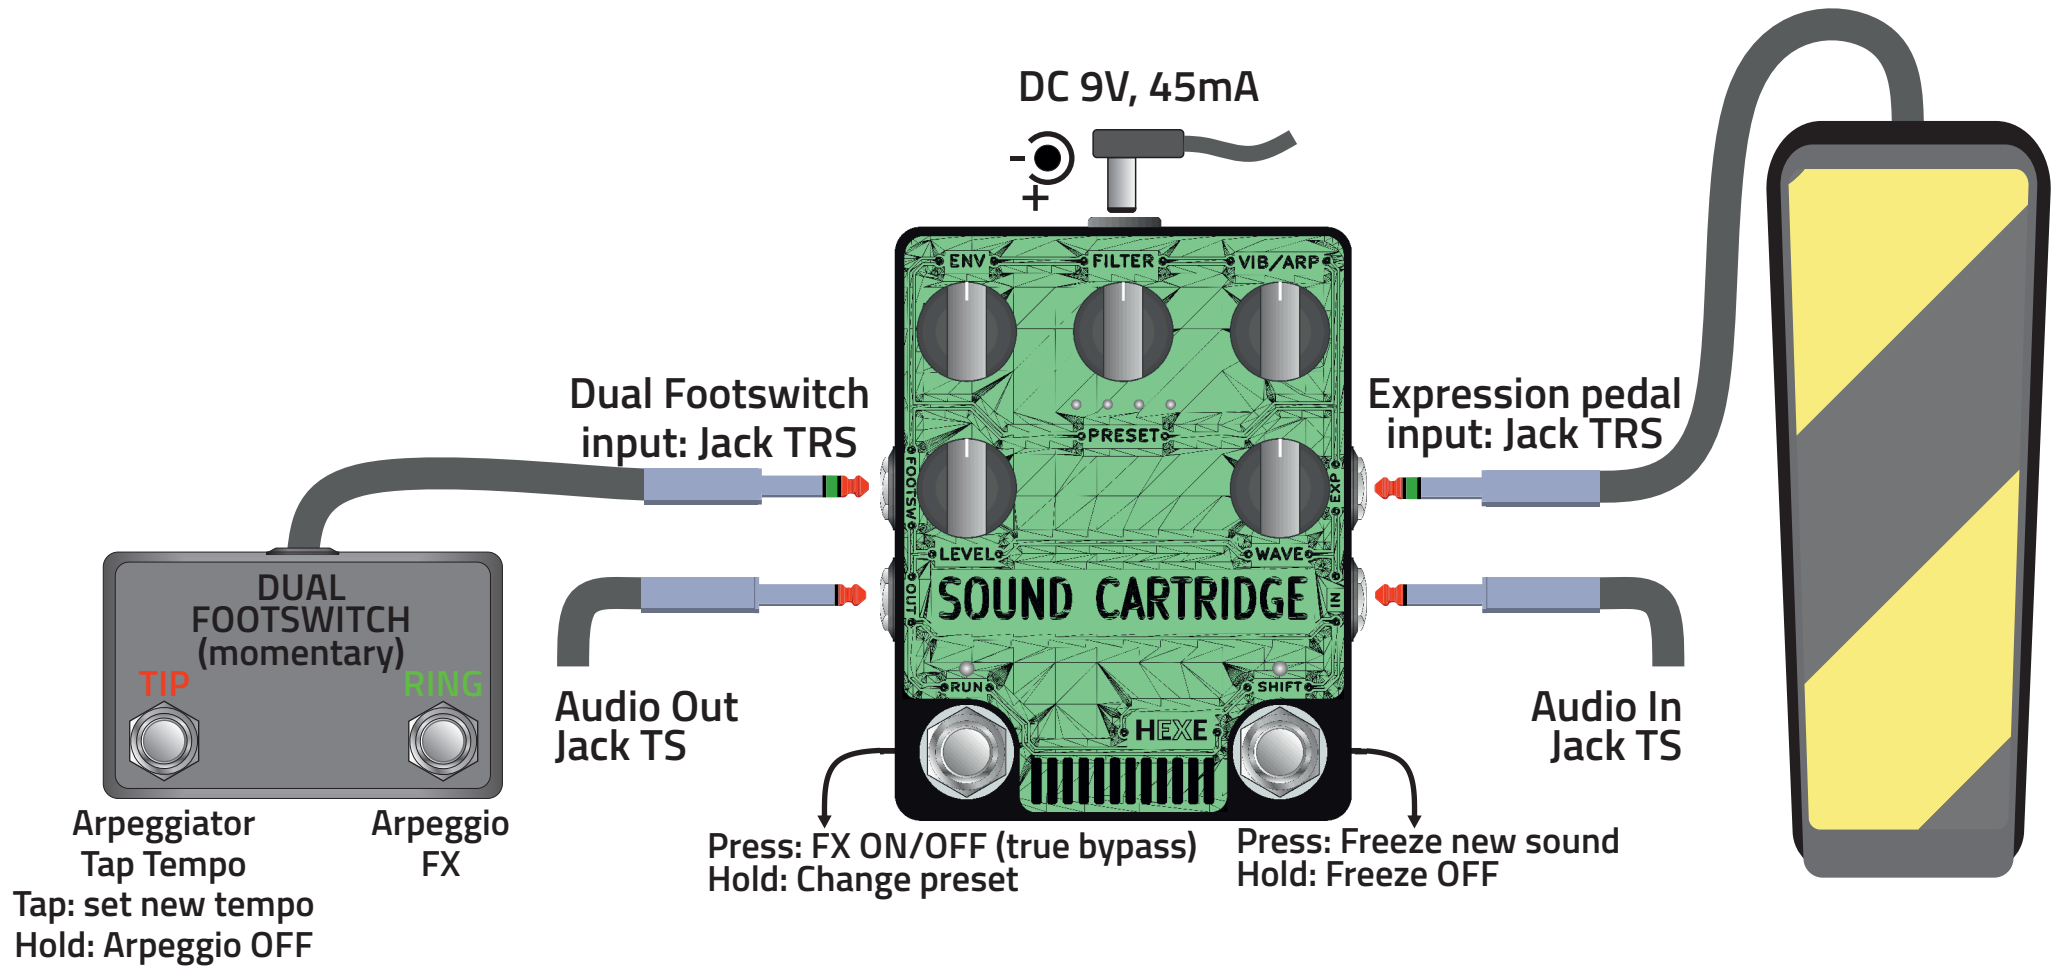


WAVE

Waveform control

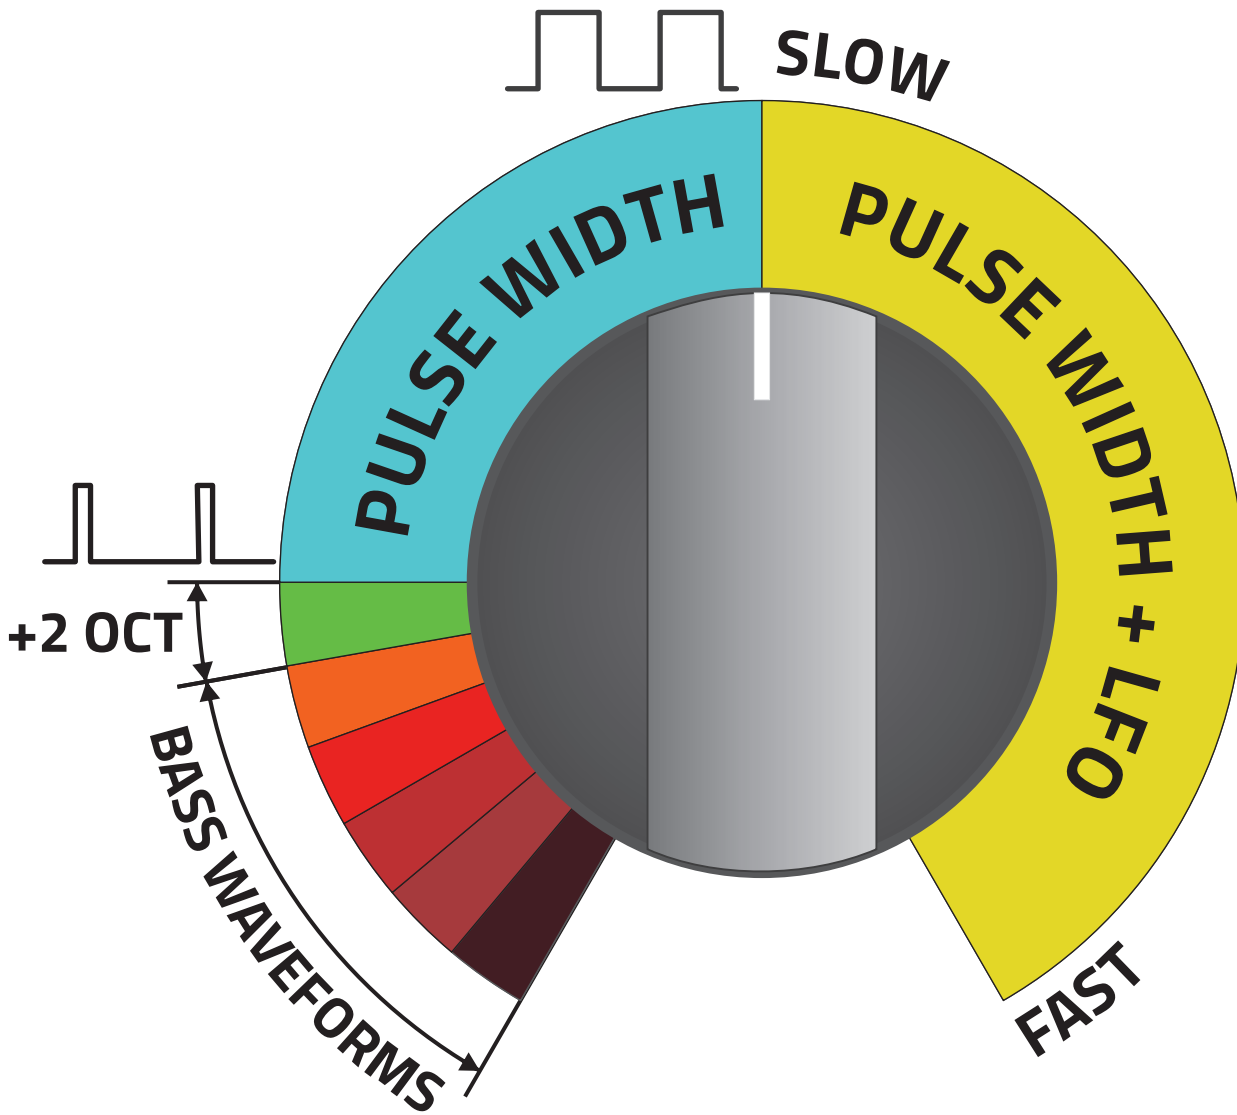


VIB/ARP

Vibrato/Arpeggio control

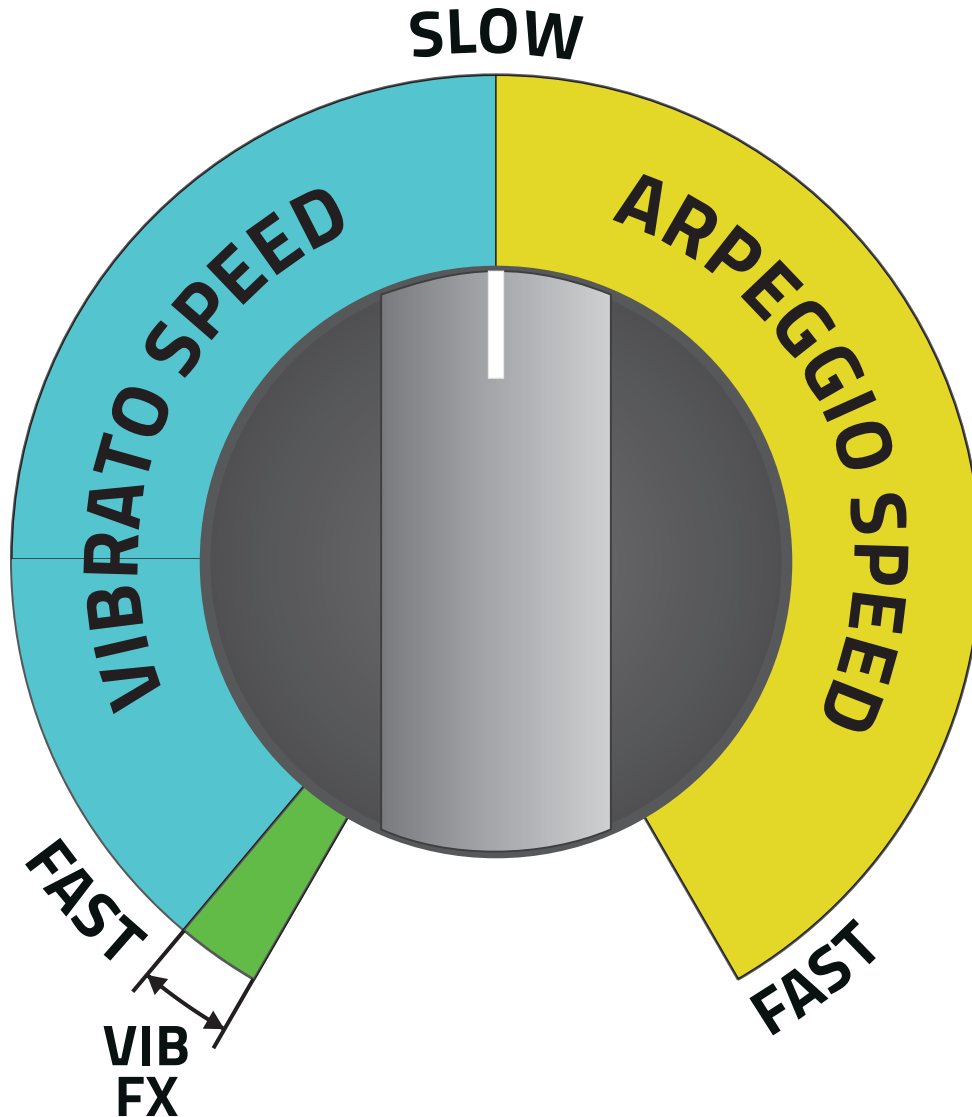


FILTER

Lowpass/Highpass tone control

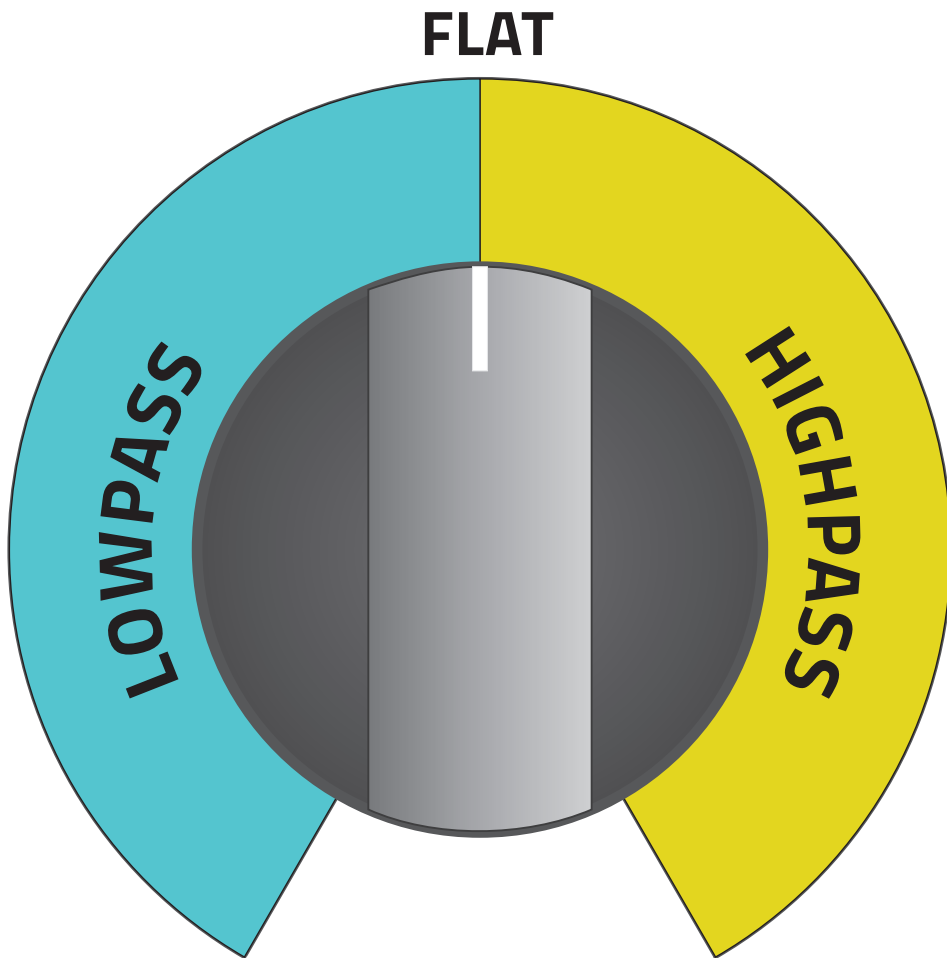


ENV

Envelope control

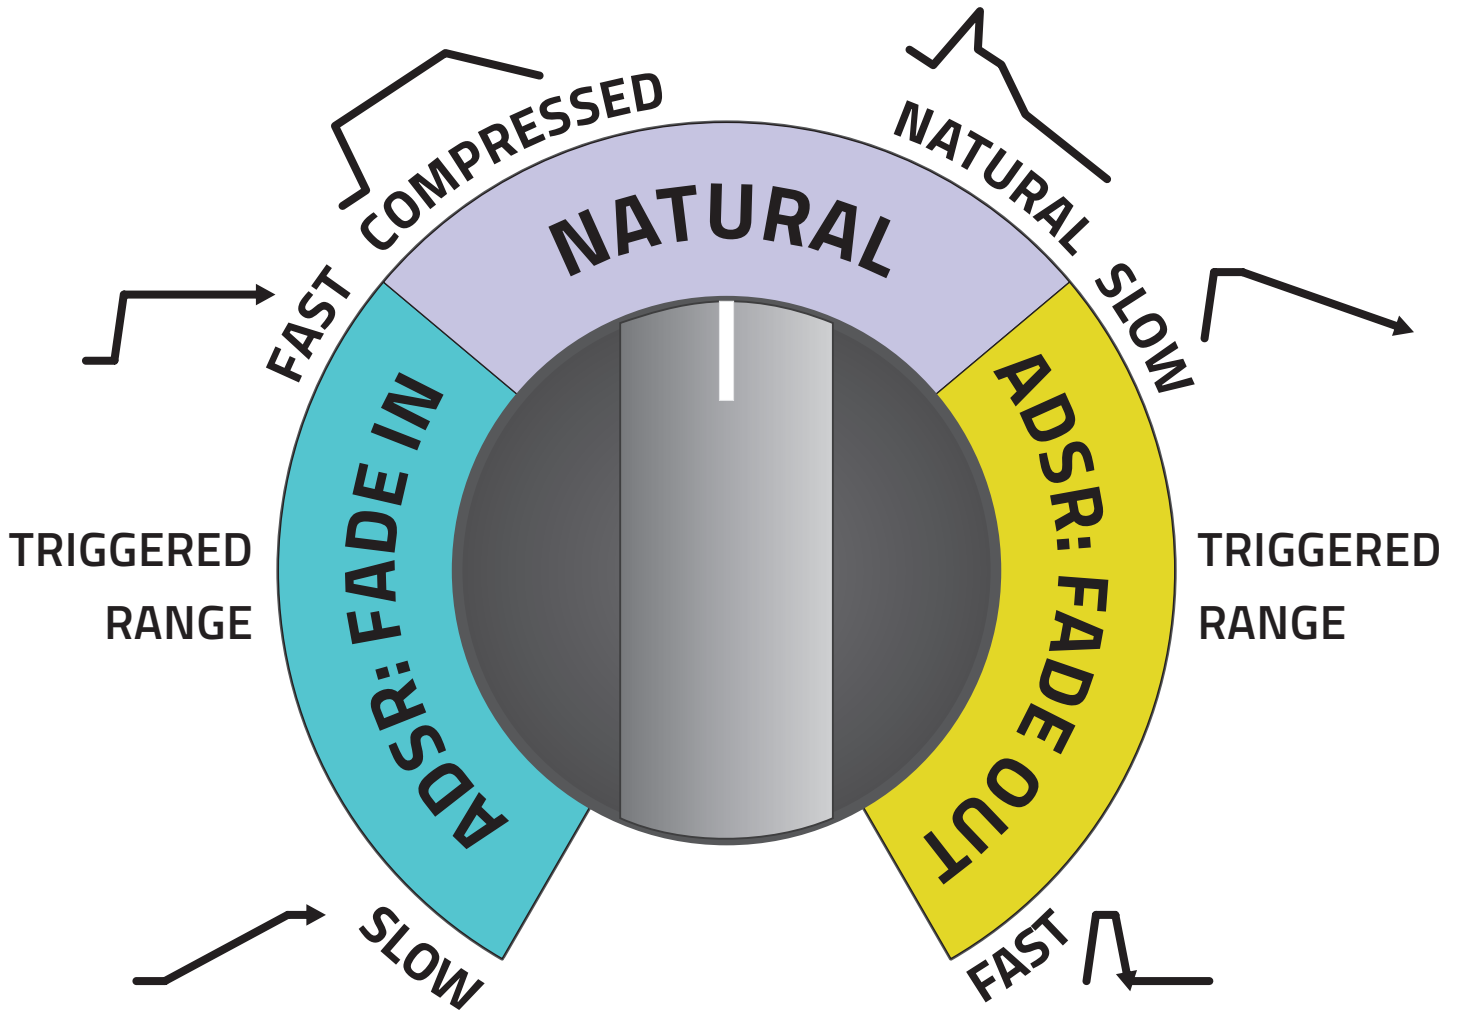


Switching the PRESETS

1. Press&Hold the RUN footswitch.
2. Browse through 4 available presets by pressing the RUN footswitch.
3. To activate the new preset press&hold the RUN footswitch again.
4. Pedal remembers the last used preset and will load it upon next power up.

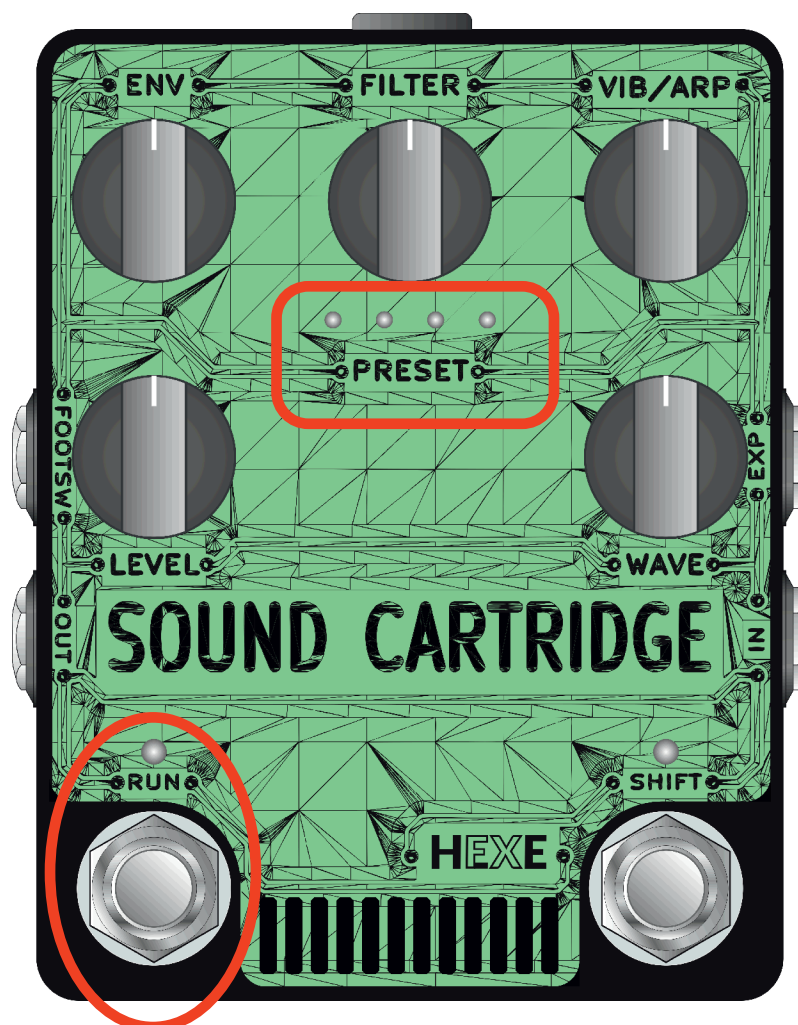

Expression pedal setup

1. Switch to PRESET you want to edit
2. Press&Hold SHIFT
3. Press&Hold RUN
4. RUN led is ON, SHIFT LED blinks
5. Set the expression pedal to heel position (MIN PRESET)

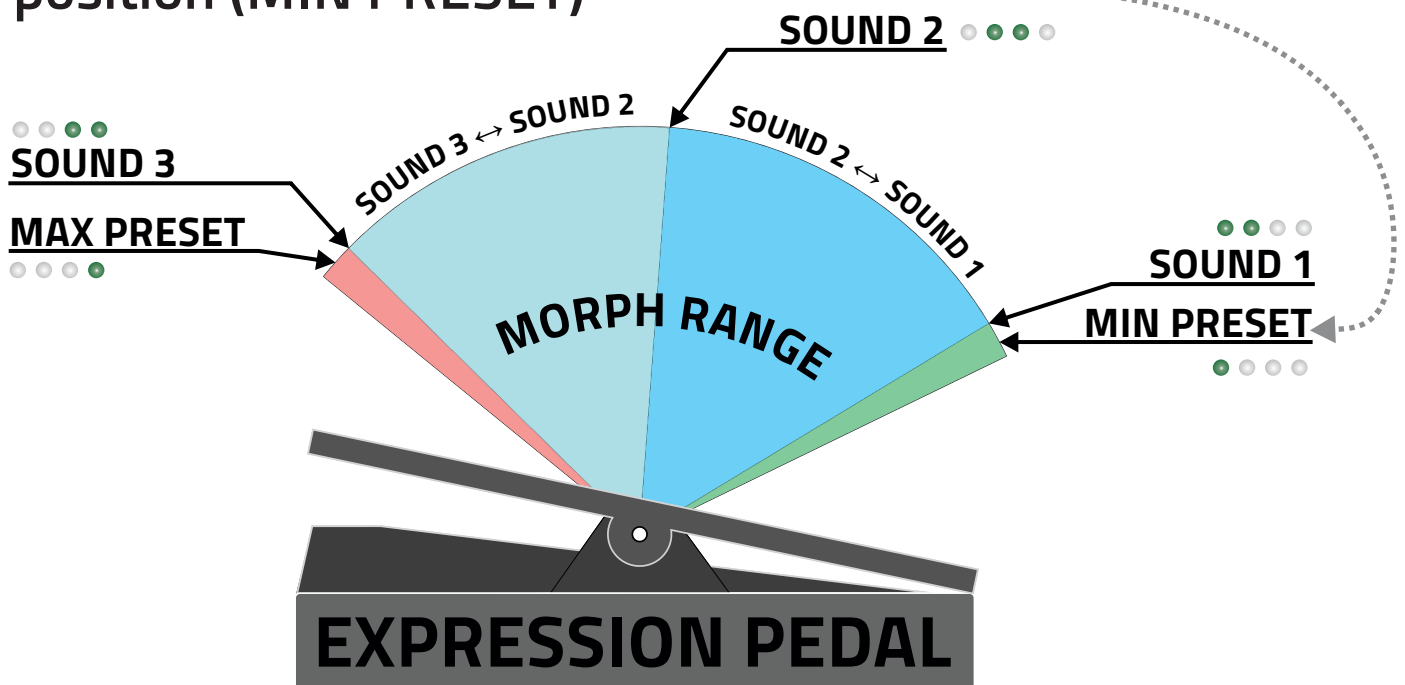

6. Set the desired sound using the knobs
7. Press SHIFT to save the settings for the current exp pedal position, RUN led will quickly flash a few times
7. Repeat steps 5-7 for SOUND 1-3 and the MAX PRESET
8. Press&Hold SHIFT, Press&Hold RUN to save the PRESET and exit the Expression pedal setup mode.

Input Gain Setup

1. Power off the pedal
2. Press&Hold RUN
3. Apply power
4. LEDs blink in order RUN→SHIFT, RUN→SHIFT...
5. Press SHIFT to increase the input gain or RUN to decrease it. There are 4 available values shown by the PRESET LED bar.
6. Once done, press&hold RUN then press&hold SHIFT to save the new setting

Alarm messages

PRESET LED bar is used to show the following alarm messages:

1. Supply voltage drop detected: 3 short blink + pause.
Press RUN to reboot the pedal
2. Expression pedal error: 2 short blinks + pause.
Check the connection, jack type (has to be TRS) or the plug polarity.
TIP = signal, pot wiper
RING = reference voltage, pot max terminal
SLEEVE = ground, pot min terminal

Factory Reset

Factory reset will restore all the Preset settings to stock ones. An external dual footswitch is required to perform that operation.

1. Power off the pedal
2. Plug in a dual momentary type external footswitch
2. Press&Hold BOTH footwtiches
3. Apply power
4. Restoring and verifying the settings will be confirmed by a short animation shown on the PRESET led bar.